



SINGER® HyperFont™: Creating Text


The Hyperfont™ program can be found under the “Create Menu” after the program has been installed.

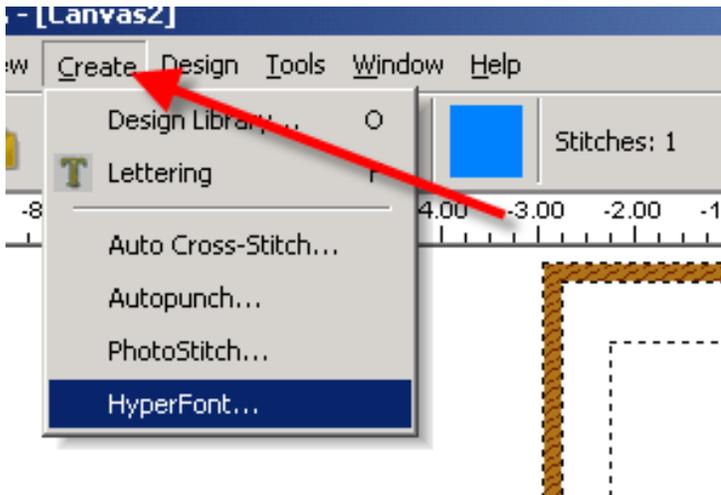


After choosing Hyperfont™ – click “NEXT” on the Wizard screen:

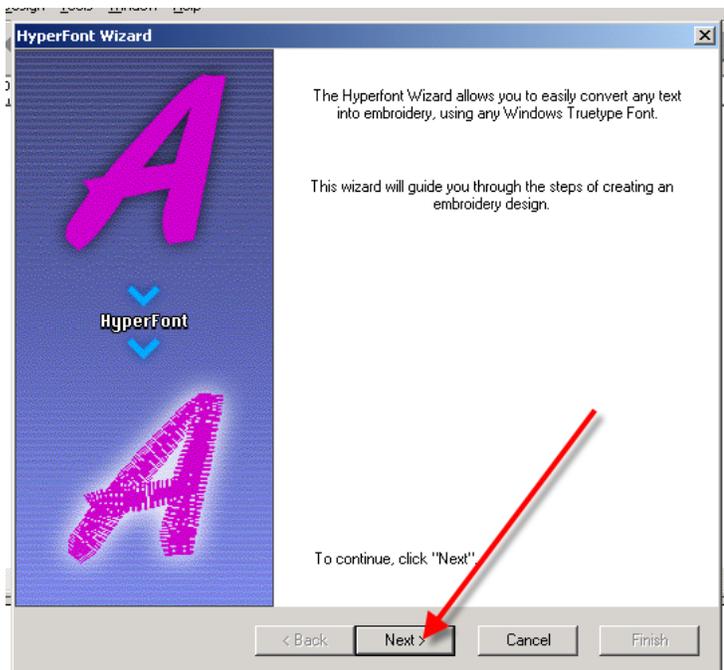


Then type in the text in the dialog box and choose the font from the built-in lettering on your computer:

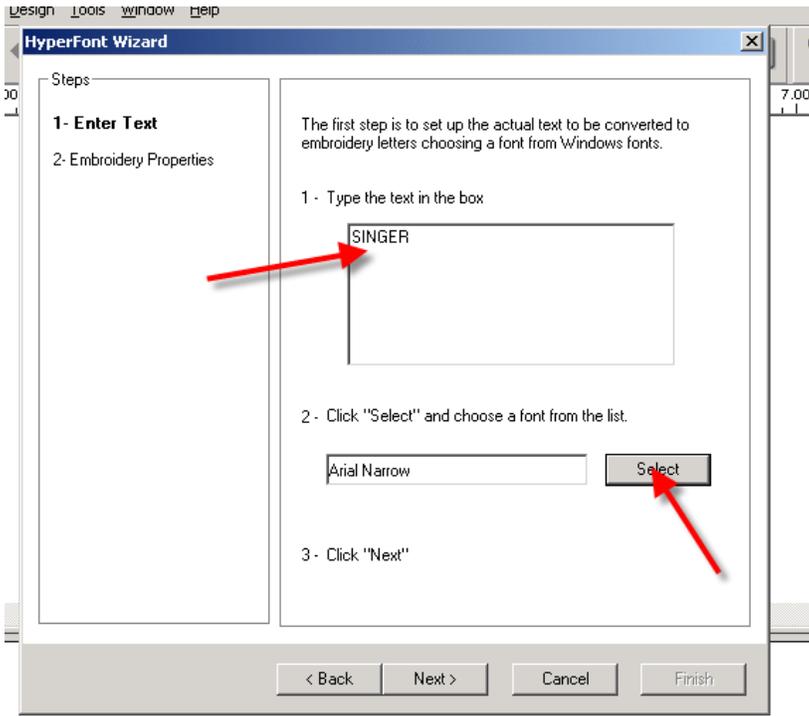


Then Click on NEXT.

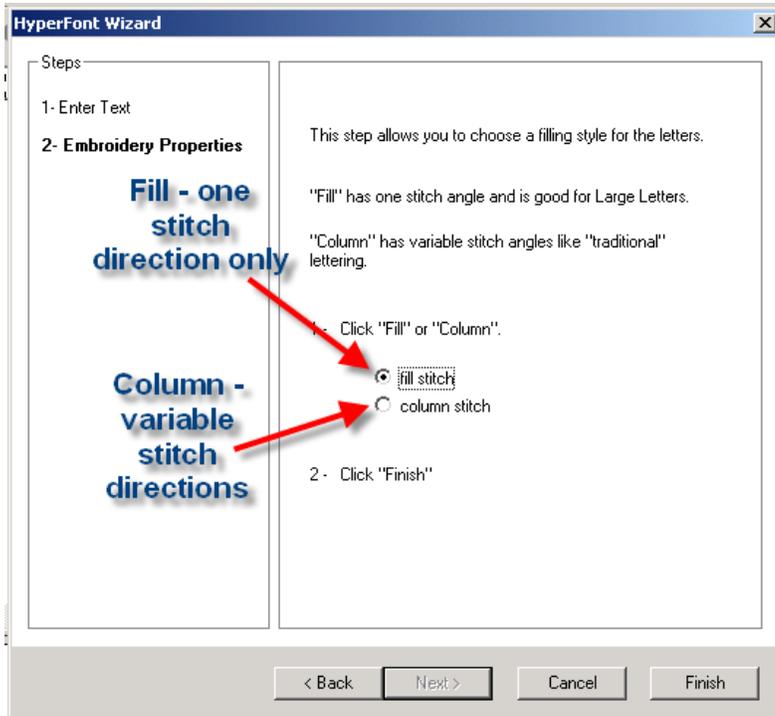


Choose Fill Type – Fill Stitch has only one stitch direction

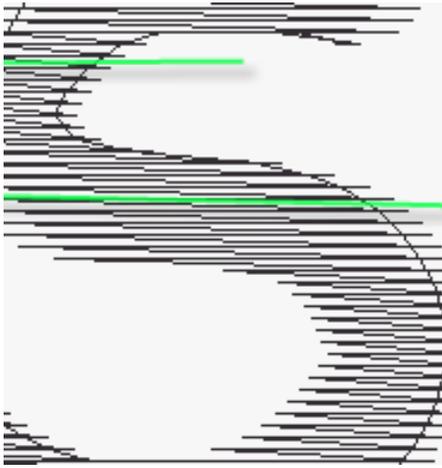

Column Stitch has variable directions:

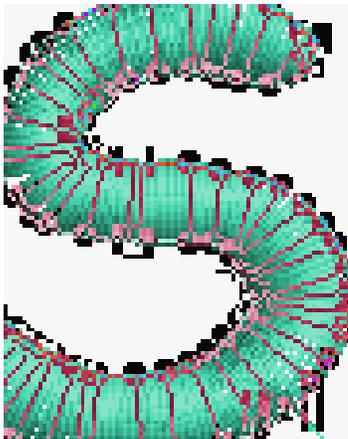

After selecting desired fill type click on “Finish”.
This will take your lettering to the TEXT screen in the SINGER® FUTURA™.

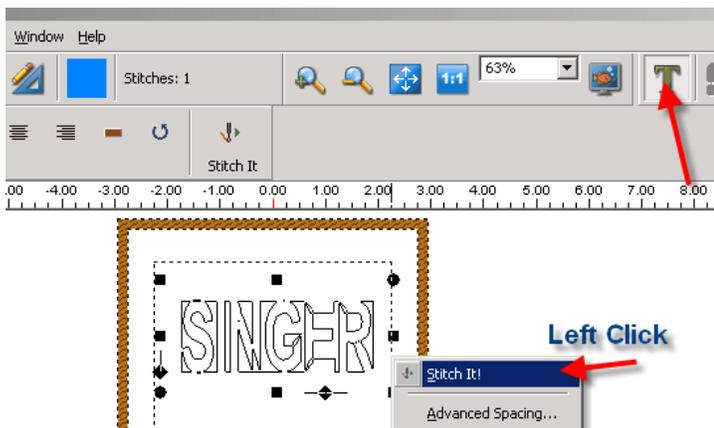

On this screen you can edit the size and spacing or Letter Frame of the text.
Then you will left click to apply stitches.

SINGER is sewing made easy.™